

# 450KG ENGINE STAND

## ASSEMBLY INSTRUCTIONS

1. DO NOT LOAD BEYOND RATED CAPACITY
2. USE ONLY ON HARD LEVEL SURFACE OF SUPPORTING LOAD
3. DO NOT ROLL LOADED STAND OVER CRACKS, CORDS, BUMPS, STEPS, OR UNEVEN SURFACES
4. ENSURE ALL COMPONENTS ARE ASSEMBLED AND FASTENERS ARE FULLY TIGHTENED BEFORE APPLYING LOAD
5. ASSURE LOAD IS CENTRED AND SECURED TO MOUNTING PLATE. LOCK ROTATING MECHANISM PRIOR TO APPLYING LOAD
6. WHEN RELEASING ROTATING MECHANISM, DO SO SLOWLY AND CAREFULLY. OFF CENTRED LOADS MAY CAUSE INADVERTENT ROTATION, WHEN MECHANISM IS RELEASED
7. DO NOT SUBSTITUTE MOUNTING HARDWARE
8. READ AND UNDERSTAND INSTRUCTIONS BEFORE USE. FAILURE TO COMPLY WITH ALL RECOMMENDATIONS MAY RESULT IN SUDDEN LOSS OF LOAD, RESULTING IN DAMAGE AND/OR PERSONAL INJURY

Item	Description	Qty
1	M14 x 60mm Bolt	4
2	M14 Washer	6
3	M14 Lockwasher	4
4	M14 Nut	4
5	Pin	1
6	M12 Nut	5
7	M12 Lockwasher	5
8	M12 Washer	5
9	M12 x 70mm Bolt	2
10	M12 x 80mm Bolt	1
11	Retaining Ring	2
12	Wheel	2
13	Caster	2
14	Front beam	1
15	Middle beam	1
16	Rear beam	1
17	Main post	1
18	Turning plate	1
19	Shifting stand	4
20	Handle	1

