


595985  
PARTS BREAKDOWN

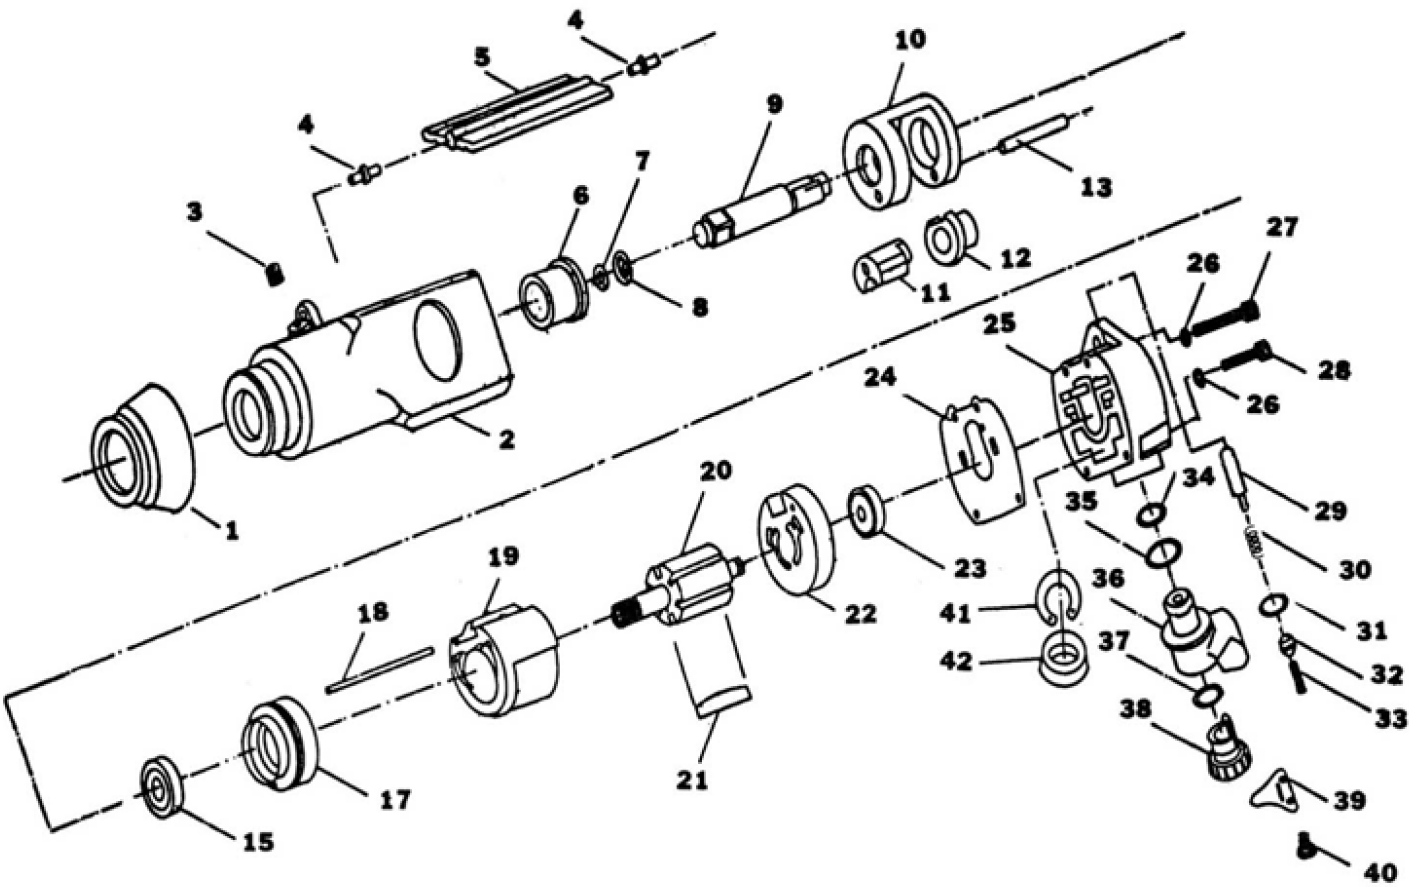

Component	Item Description
<a href="#">534377</a>	B/Fly Wrench Screw 534365
<a href="#">534761</a>	B/Fly Wrench Back Cap 534365
<a href="#">534762</a>	B/Fly Wrench Back Cap Gasket 534365
<a href="#">534783</a>	B/Fly Wrench Rear Cover 534365
<a href="#">534763</a>	B/Fly Wrench Plunger 534365
<a href="#">534764</a>	B/Fly Wrench Valve 534365
<a href="#">534765</a>	B/Fly Wrench Roll Pin 534365
<a href="#">534766</a>	B/Fly Wrench Retainer Ring 534365
<a href="#">534767</a>	B/Fly Wrench O-Ring 534365
<a href="#">534768</a>	B/Fly Wrench Regulator 534365
<a href="#">534769</a>	B/Fly Wrench O-Ring 534365
<a href="#">534771</a>	B/Fly Wrench O-Ring 534365
<a href="#">534772</a>	B/Fly Wrench Plunger Spring 534365
<a href="#">534773</a>	B/Fly Wrench Valve Seat 534365
<a href="#">534774</a>	B/Fly Wrench Valve Spring 534365
<a href="#">534775</a>	B/Fly Wrench Regulator Ball 534365
<a href="#">534776</a>	B/Fly Wrench Regulator Spring 534365
<a href="#">534777</a>	B/Fly Wrench O-Ring 534365
<a href="#">534778</a>	B/Fly Wrench Throttle Spring 534365
<a href="#">534779</a>	B/Fly Wrench Throttle Valve 534365
<a href="#">534781</a>	B/Fly Wrench Regulator 534365
<a href="#">534782</a>	B/Fly Wrench O-Ring 534365
<a href="#">534460</a>	B/Fly Wrench Retainer Plate 534365

<a href="#"><u>534417</u></a>	B/Fly Wrench "O"Ring 534365
<a href="#"><u>534422</u></a>	B/Fly Wrench Hammer 534365
<a href="#"><u>535453</u></a>	B/Fly Wrench Washer 534365
<a href="#"><u>534701</u></a>	B/Fly Wrench Handle 534365
<a href="#"><u>534702</u></a>	B/Fly Wrench Anvil 534365
<a href="#"><u>534604</u></a>	B/Fly Wrench Throttle Lever 534365
<a href="#"><u>534605</u></a>	B/Fly Wrench Rear Gasket 534365
<a href="#"><u>534606</u></a>	B/Fly Wrench Valve Button 534365
<a href="#"><u>534607</u></a>	B/Fly Wrench Valve Pin 534365
<a href="#"><u>534608</u></a>	B/Fly Wrench Valve Spring 534365
<a href="#"><u>534609</u></a>	B/Fly Wrench Cap Screw 534365
<a href="#"><u>534760</u></a>	B/Fly Wrench Air Inlet Block 534365
<a href="#"><u>534406</u></a>	B/Fly Wrench Socket Retn Ring 534365-08
<a href="#"><u>525388</u></a>	Air B'Fly Imp Wrch Cap Gasket 534365-24
<a href="#"><u>525389</u></a>	Air B'Fly Imp Wrch Plunger 534365-29
<a href="#"><u>525390</u></a>	Air B'Fly Imp Wrch Spring 534365-30
<a href="#"><u>525391</u></a>	Air B'Fly Imp Wrch "O" Ring 534365-31
<a href="#"><u>525392</u></a>	Air B'Fly Imp Wrch Valve Seat 534365-32
<a href="#"><u>525393</u></a>	Air B'Fly Imp Wrch Valv Spring 534365-33
<a href="#"><u>525386</u></a>	Air B'Fly Imp Wrch 3/8" Housing 534365 - 2
<a href="#"><u>525387</u></a>	Air B'Fly Imp Wrch 3/8" Rotor Blade 534365-21

**Parts list of AT-5030**

Parts No	Description	Quantity	Parts No	Description	Quantity
YL903 – 01	Rubber Nose Guard	1	YL903 – 23	Ball Bearing	1
YL903 – 02	Motor Housing	1	YL903 – 24	Back Cap Gasket	1
YL903 – 03	Oiler Screw	1	YL903 – 25	Back Cap	1
YL903 – 04	Throttle Pin	2	YL903 – 26	Lock Washer	4
YL903 – 05	Trottle Lever	1	YL903 – 27	Cap Screw – Leng	2
YL903 – 06	Anvil Bushing	1	YL903 – 28	Cap Screw – Short	2
YL903 – 07	O-Ring	1	YL903 – 29	Plunger	2
YL903 – 08	Socket Ret Ring	1	YL903 – 30	Spring	2
YL903 – 09	Anvil	1	YL903 – 31	O-Ring	2
YL903 – 10	Hammer Cage	1	YL903 – 32	Valve Seat	2
YL903 – 11	Hammer	1	YL903 – 33	Valve Spring	2
YL903 – 12	Cam	1	YL903 – 34	O-Ring	1
YL903 – 13	Hammer Pin	1	YL903 – 35	O-Ring	1
YL903 – 15	Ball Bearing	1	YL903 – 36	Air Inlet Block	1
YL903 – 17	Front End Plate	1	YL903 – 37	O-Ring	1
YL903 – 18	Motor Pin	1	YL903 – 38	Regulator	1
YL903 – 19	Cylinder	1	YL903 – 39	Retainer Plate	1
YL903 – 20	Rotor	1	YL903 – 40	Screw	2
YL903 – 21	Rotor Blade	6	YL903 – 41	Retaining Ring	1
YL903 – 22	Rear End Plate	1	YL903 – 42	Fixing Ring	1

**Made In Taiwan**