


532264
PARTS BREAKDOWN

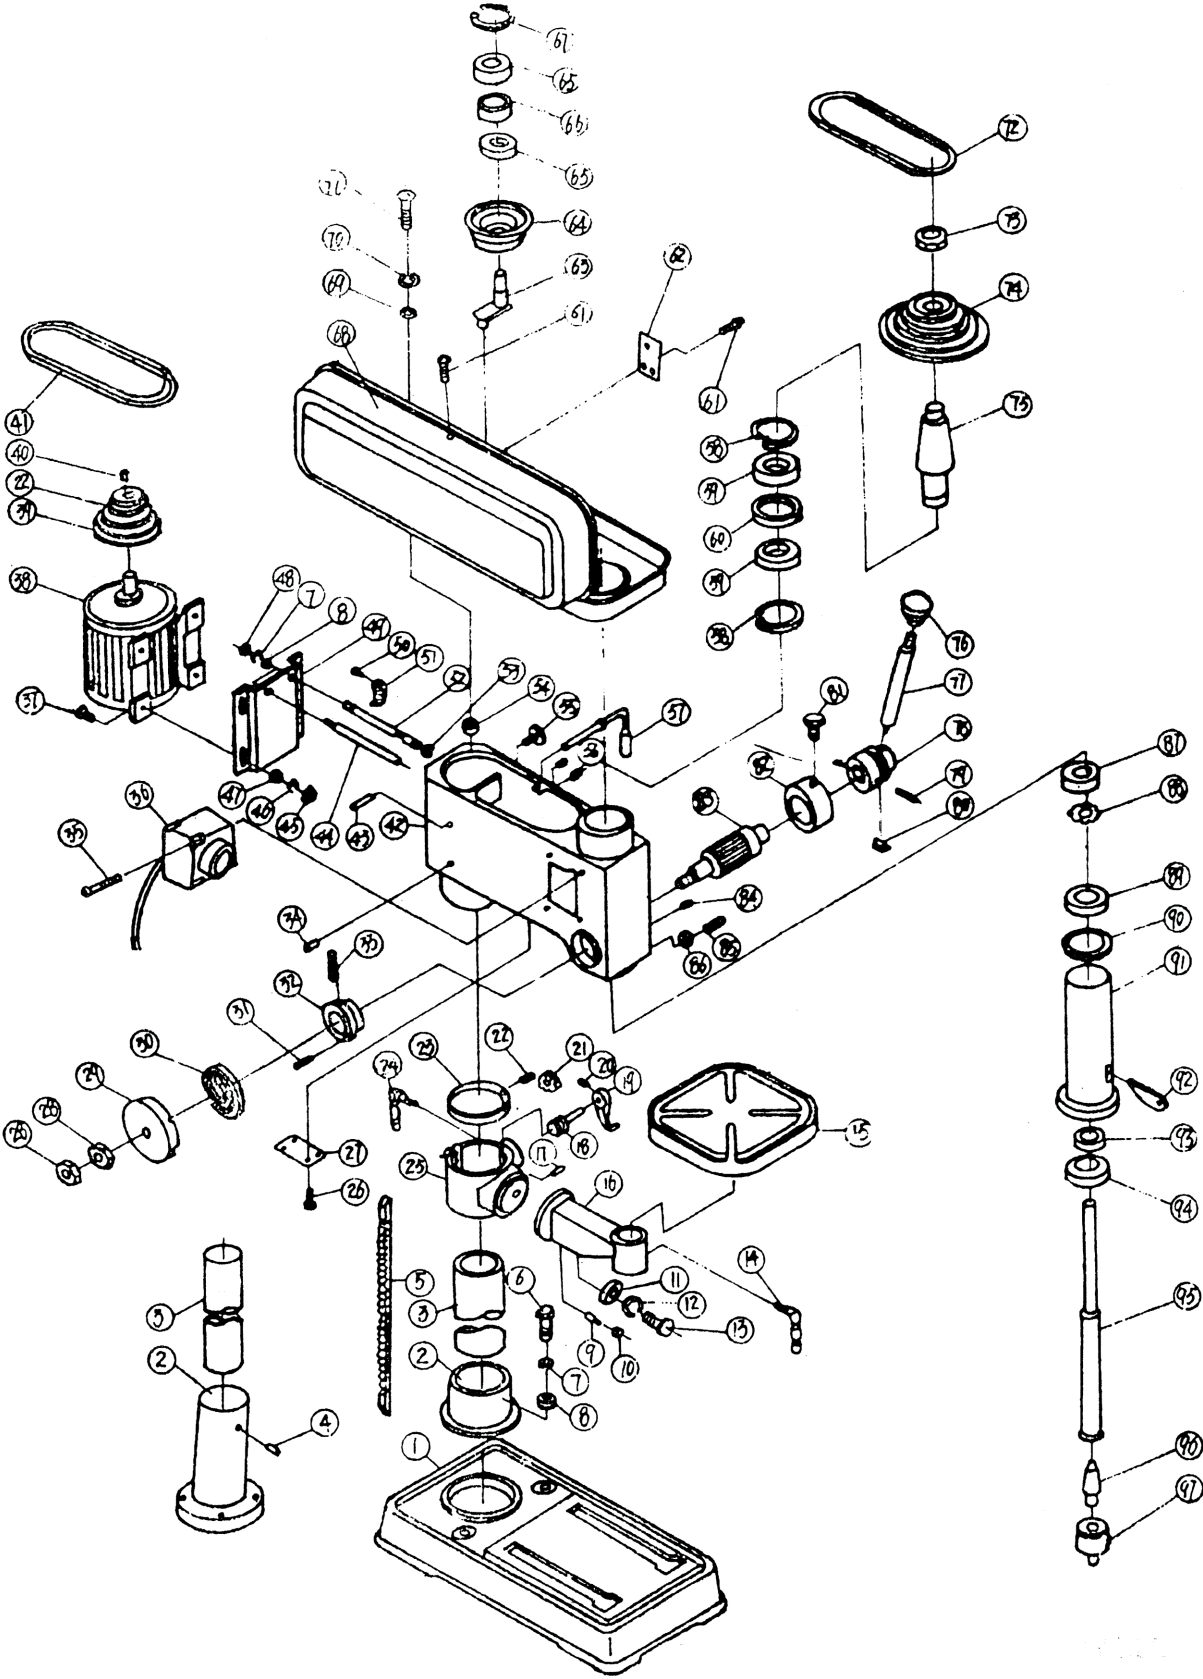

Item Code	Alternate Code	Extended Description
524404	532264-63	Drill Floor 9Sp Idler Arm 532264-63 Idler Arm
530601	532264-77	Drill Floor 9Sp.32mm Handle 532264-77
532610	532264-38C	Drill Floor 9Sp.32mm Cap Motor 532264
533994	532264-36	Drill Floor 9Sp.32mm-Switch 532264
536590	532264-39	Drill Floor 9Sp Motor Pulley 532264
536591	532264-64	Drill Floor 9Sp.Ch-Mid Pulley 532264
536592	532264-74	Drill Floor 9Sp.Ch-Spl Pulley 532264
536595	532264-73	Drill Floor 9Sp.Ch-Nut 532264
536597	532264-72	Drill Floor 9Sp Ch Belt 72 A787 532264
536598	532264-95	Drill Floor 9Sp.Ch-Spindle 532264
536599	532264-91	Drill Floor 9Sp Arbor 1 532264-Spindle Arbor
536600	532264-96	Drill Floor 9Sp Arbor 2 532264 Chuck Arbor
595550	532264-38	Drill Floor 9sp Motor Suit 532264
596835	532264-29-30	Drill Spring and Case Suit 532264 Drill Press

1.Base	34.Screw	67.Retaining ring
2.Column holder	35.Screw	68.Pulley cover
3.Column	36.Switch	69.Washer
4.Screw	37.Bolt	70.Washer
5.Rack	38.Motor	71.Screw
6.Bolt	39.Motor pulley	72.V-Belt
7.Elastic washer	40.Key	73.Nut
8.Washer	41.V-Belt	74.Spindle pulley
9.Key	42.Body	75.Key
10.Nut	43.Key	76.Knob
11.Washer	44.Bolt	77.Handle
12.Elastic washer	45.Nut	78.Handle holder
13.Bolt	46.Washer	79.Key
14.Locking handle	47.Washer	80.Sliding Block
15.Table	48.Nut	81.Screw
16.Table holder	49.Motor plate	82.Scale ring
17.Key shaft	50.Bolt	83.Gear shaft
18.Worm	51.Lever-adjusting	84.Screw
19.Cranr	52.Bolt	85.Screw
20.Bolt	53.Retaining ring	86.Nut
21.Gear wheel	54.Washer	87.Screw
22.Screw	55.Screw	88.Washer
23.Column Boot	56.Screw	89.Bearing
24.LocRing handle	57.Shaft	90.Washer
25.Brace	58.Retaining ring	91.Spindle sleeve
26.Screw	59.Bearing	92.Drift key
27.Cover	60.Quill	93.Bearing
28.Nut	61.Screw	94.Bearing
29.Spring cap	62.Square plate	95.Spindle
30.Spring	63.Idler orm	96.Arbor
31.Key	64.Middle pulley	97.Chuck
32.Cover	65.Bearing	
33.Key	66.Liner tube	