


577018

PARTS BREAKDOWN

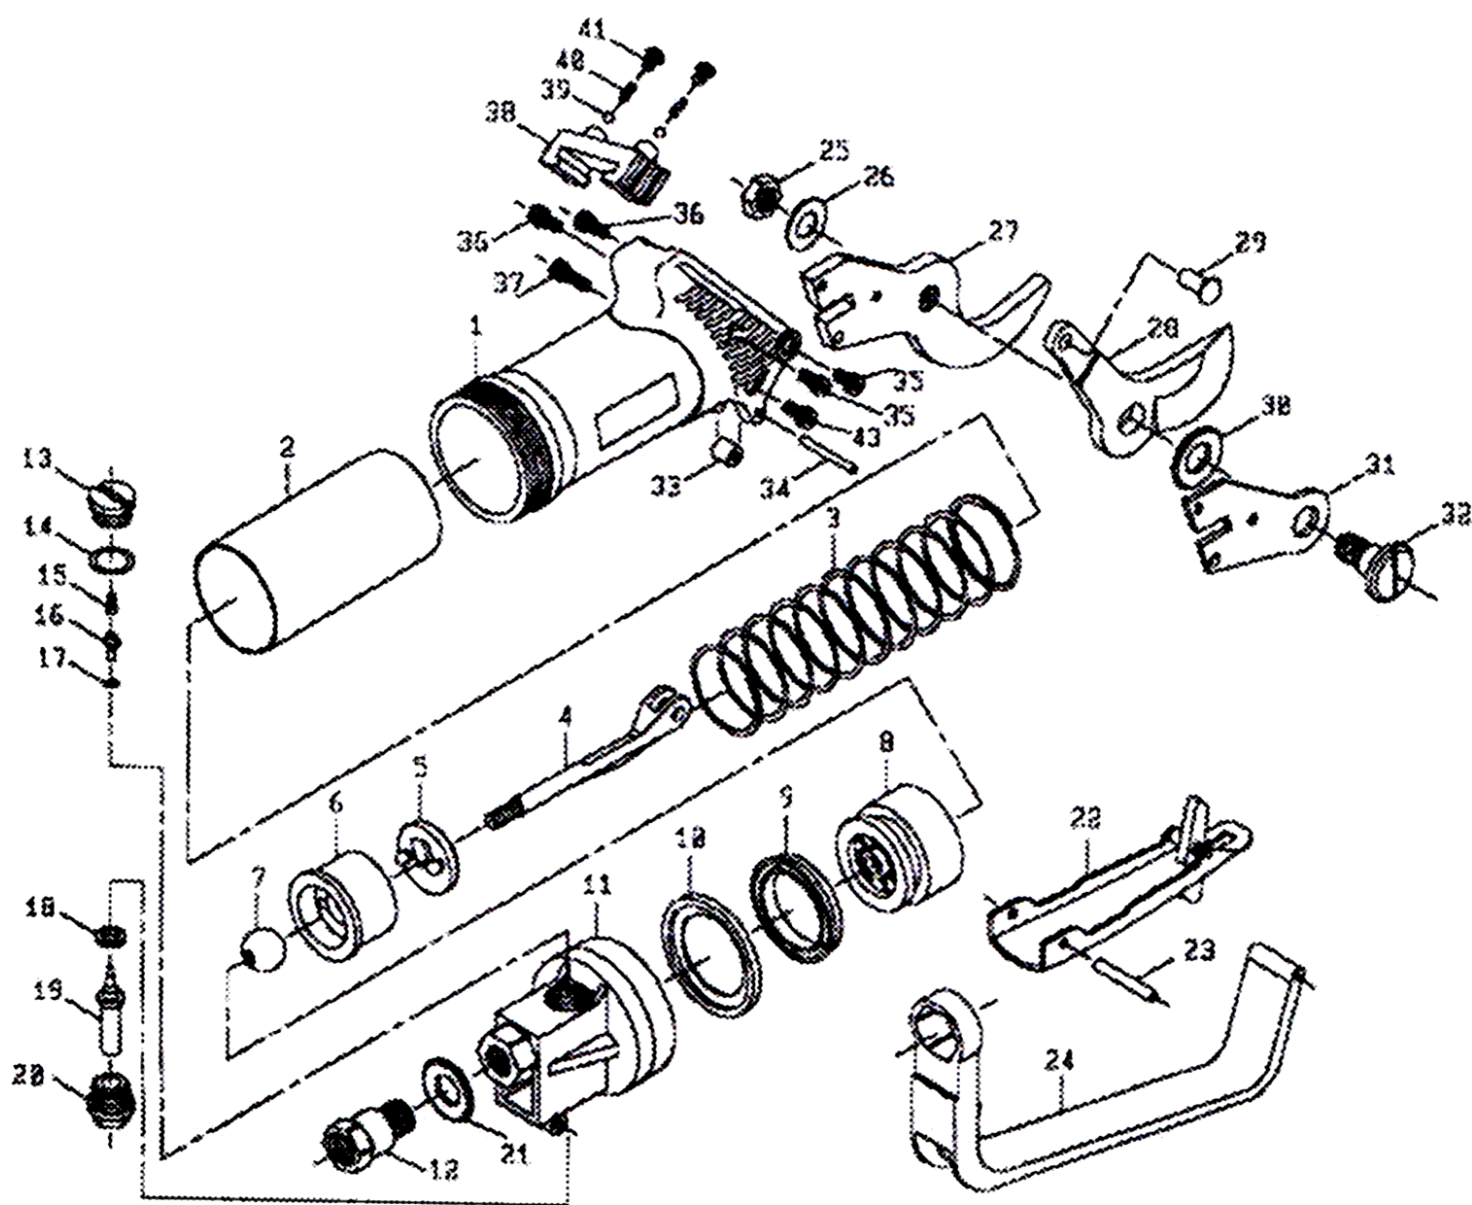

AT-6001

NO	DESCRIPTION	Q'TY
01	HOUSING	1
02	BUSHING	1
03	SPRING	1
04	SHAFT	1
05	BUMPER	1
06	SPRING PLATE	1
07	JOIN TER	1
08	PISTON	1
09	PISTON RING	1
10	DAMPING RING	1
11	HOUSING CAP	1
12	AIR INLET	1
13	SCREW	1
14	O-RING	1
15	SPRING	1
16	FRONT PUSH ROD	1
17	O-RING	1
18	DAMPING RING	1
19	VALVE STEM	1
20	SCREW	1
21	WASHER	1

NO	DESCRIPTION	Q'TY
22	LEVER	1
23	PIN	1
24	HANDLE GUARD	1
25	NUT	1
26	WASHER	1
27	LEFT BLADE	1
28	RIGHT BLADE	1
29	PIN	1
30	WASHER	1
31	GRIDE PLATE	1
32	BOLT	1
33	NUT	1
34	PIN	1
35	SCREW (M4X6L)	2
36	SCREW (M4X8L)SPW	2
37	SCREW (M4X12L)	1
38	INSURE	1
39	STEEL BALL	2
40	SPRING	2
41	SCREW (M4X6L)	2
43	SCREW (M4X8L)	1