



595186
PARTS BREAKDOWN

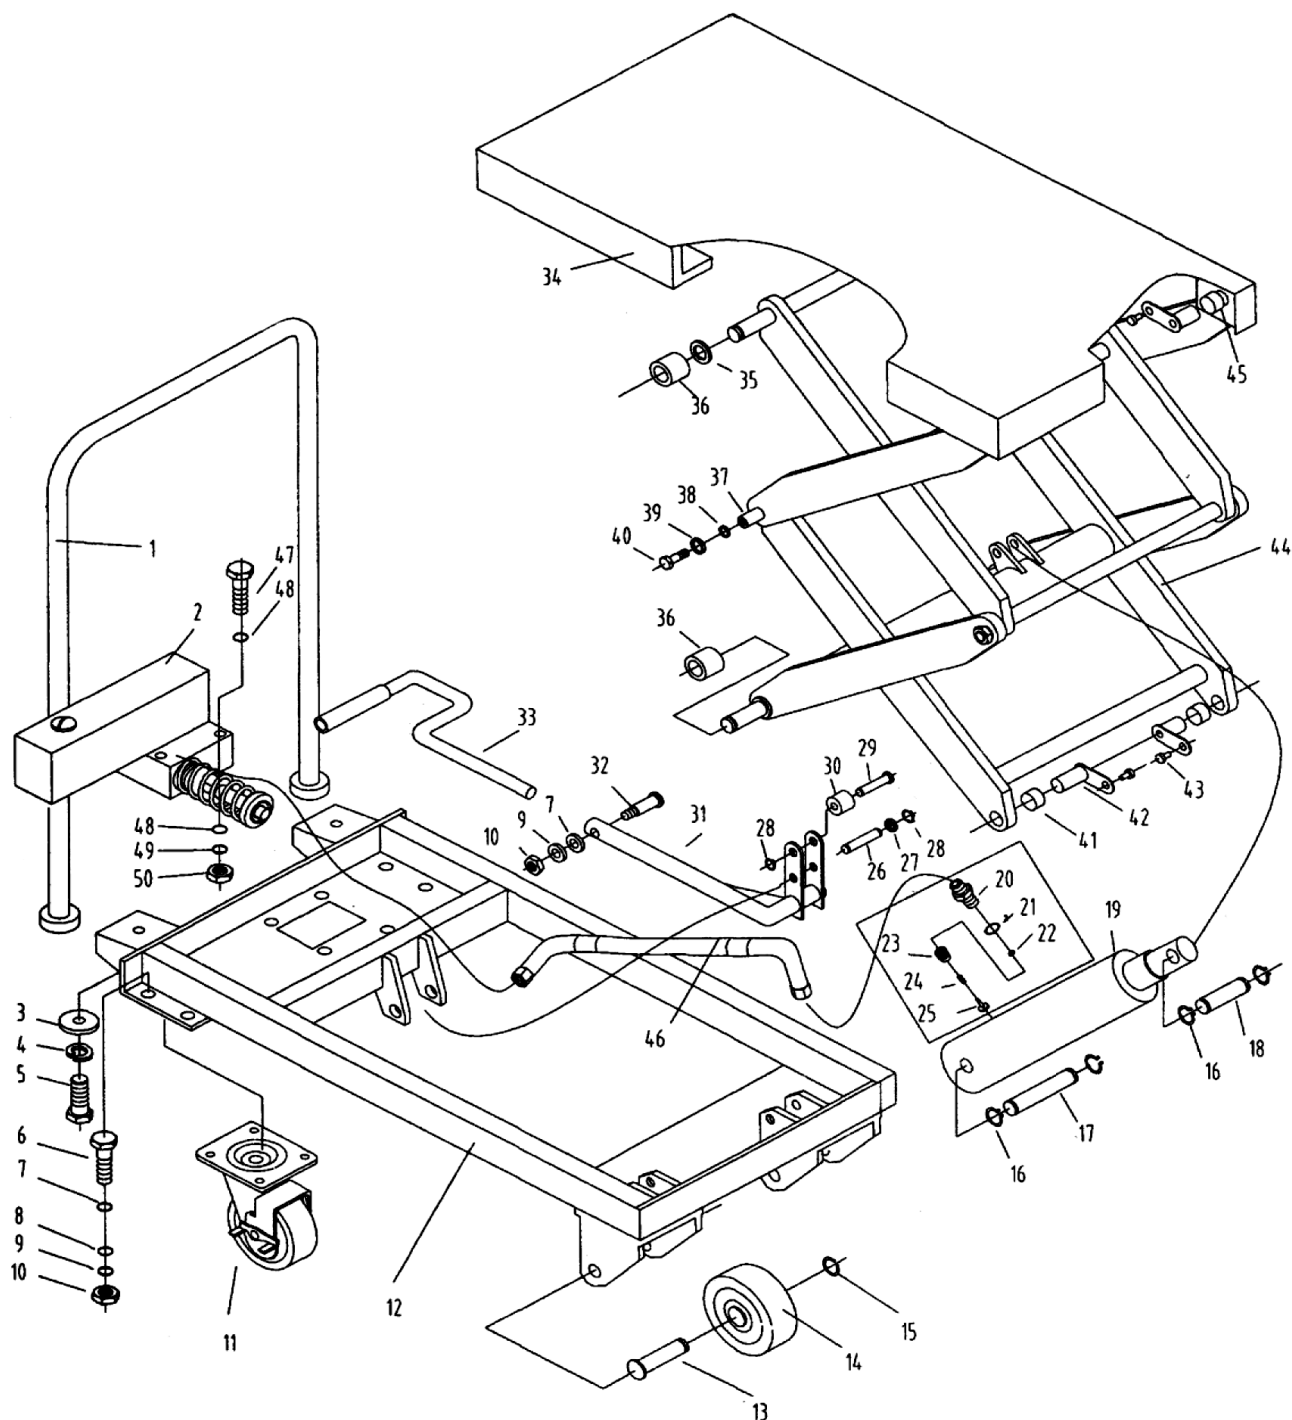

NO.	DESCRIPTION	QUANTITY	NO	DESCRIPTION	QUANTITY
1	HANDLE BAR	1	26	SHAFT	1
2	PUMP	1	27	WASHER	2
3	WASHER	2	28	RETAINING RING	2
4	WASHER	2	29	PIN	1
5	SCREW	2	30	ROLLER	1
6	SCREW	8	31	CONECTING ROD	1
7	WASHER	9	32	SCREW	1
8	WASHER	8	33	PEDAL ROD	1
9	WASHER	9	34	TABLE	1
10	NUT	9	35	WASHER	2
11	UNIVERSAL WHEEL	2	36	ROLLER	4
12	FRAME	1	37	SHAFT	2
13	SHAFT	2	38	WASHER	4
14	WHEEL	2	39	WASHER	4
15	RETAINING RING	2	40	SCREW	4
16	RETAINING RING	4	41	BUSH	4
17	PIN	1	42	L-PIN	4
18	PIN	1	43	SCREW	4
19	CYLINDER	1	44	ARM	1
20	TIE-IN	1	45	BUSH	2
21	COPPER WASHER	1	46	VITTA	1
22	NUT	1	47	SCREW	4
23	DAMP VALVE	1	48	WASHER	8
24	SPRING	1	49	SPRING WASHER	4
25	CORE OF VALVE	1	50	NUT	4

595186
PARTS BREAKDOWN

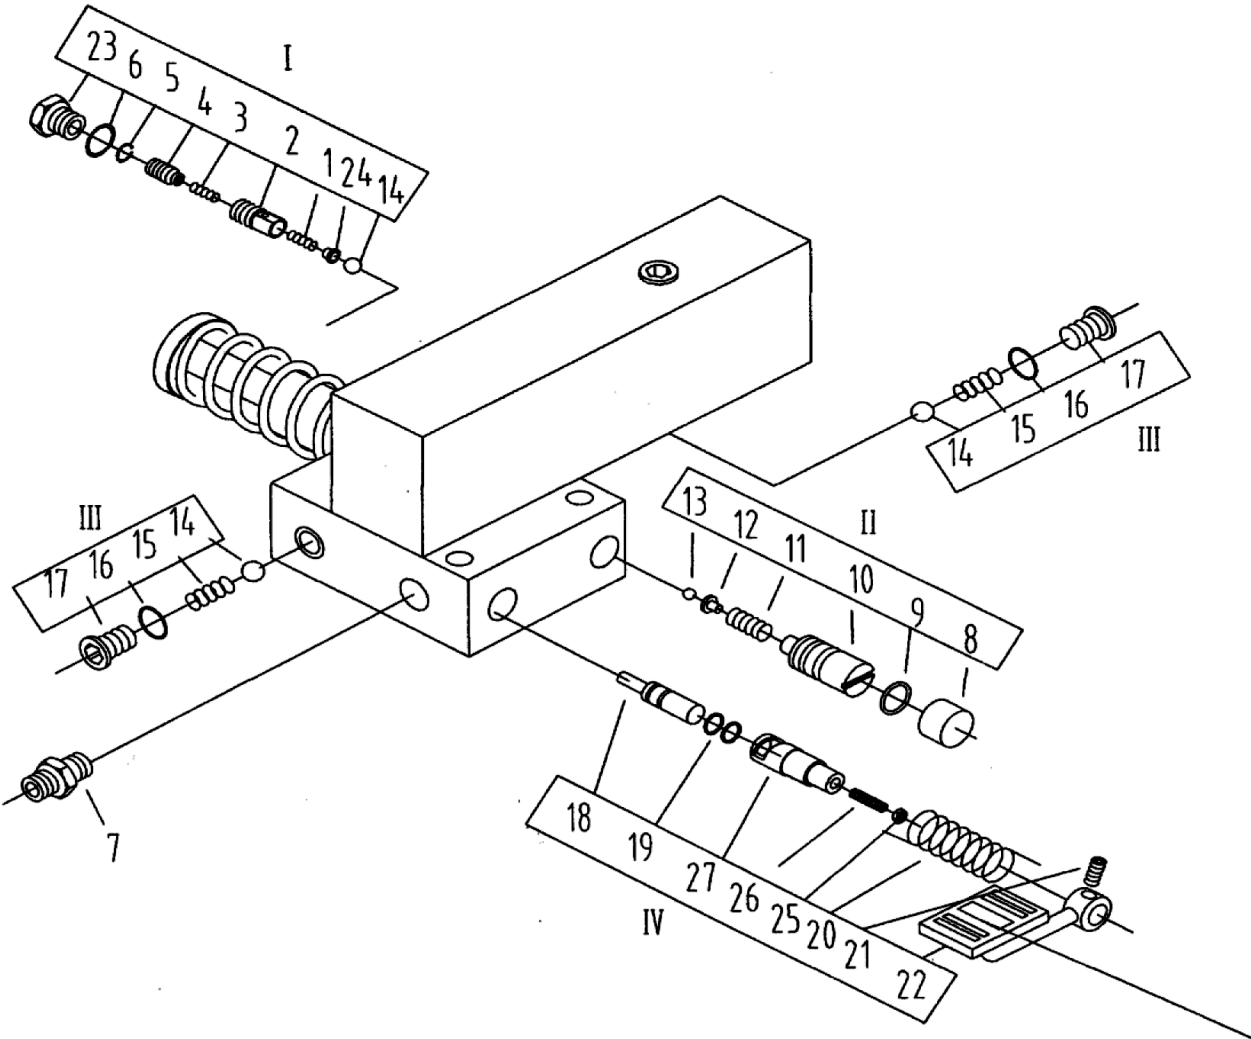

NO DESCRIPTION QUANTITY

1	SPRING	1
2	SET OF VALVE	1
3	SPRING	1
4	VALVE	1
5	RETAINING RING	1
6	COPPER WASHER	1
7	TIE-IN	1
8	COVER RING	1
9	O-RING	1
10	ADJUSTING SCREW	1
11	SPRING	1
12	SPRING SEAT	1

NO DESCRIPTION QUANTITY

13	STEEL BALL	1
14	STEEL BALL	3
15	SPRING	2
16	COPPER WASHER	2
17	SCREW	2
18	VALVE PIN	1
19	O-RING	2
20	SPRING	1
21	SCREW	1
22	PEDAL ROD	1
23	SCREW	1
24	SPRING SEAT	1
25	UNT	1
26	SCREW	1
27	Lever Plate	1