


592580
PARTS BREAKDOWN

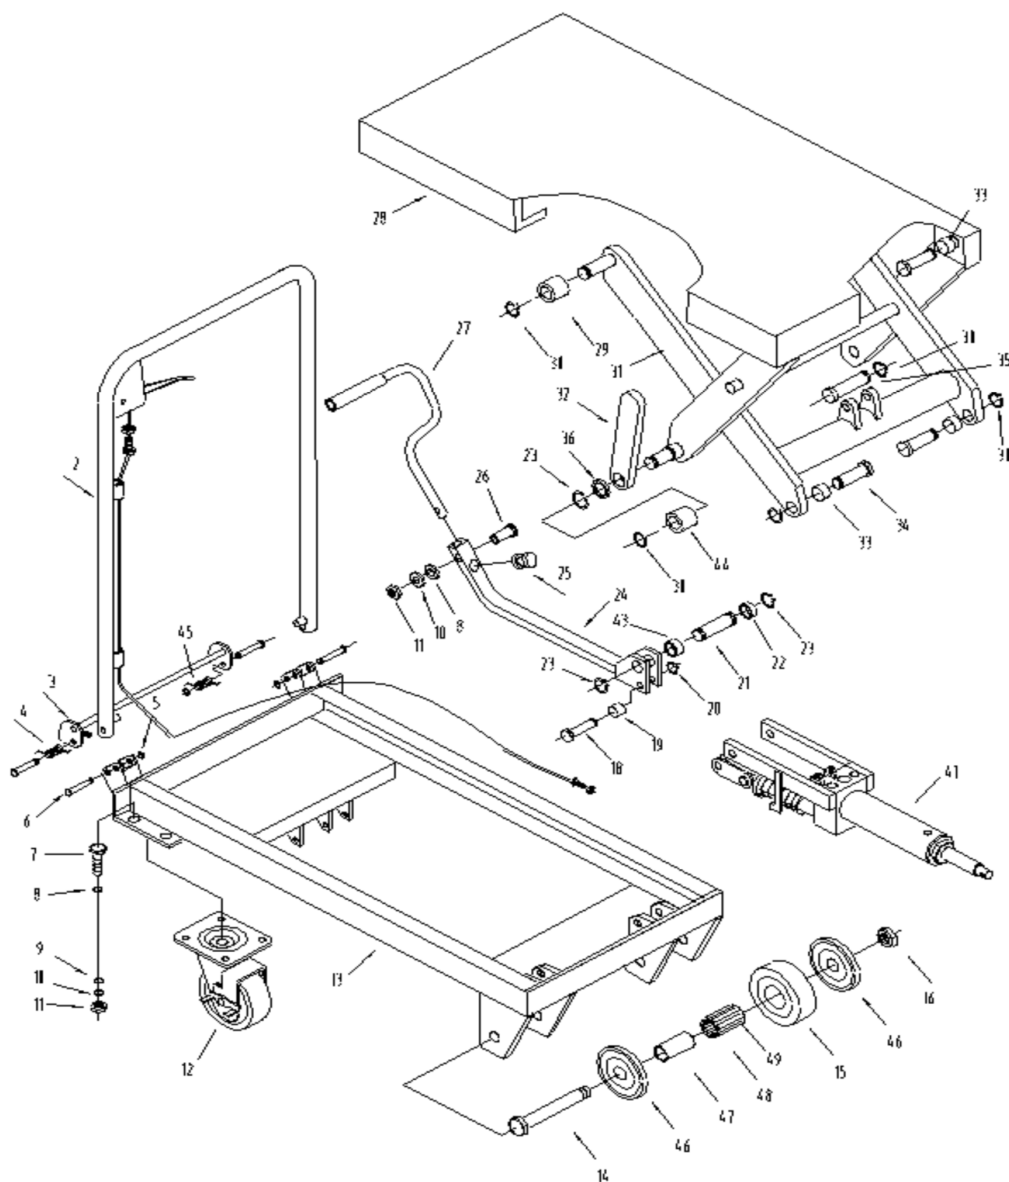


Component	Item Description
<u>525543</u>	Hyd Scissor Lift Castor Sp150 / 592580-17 Lifting Table
<u>524123</u>	Hyd Scissor Lift Seal Kit 592580-Sp150 Lifting Table
<u>500396</u>	Ram/Pump Unit Complete to Suit 592580 Scissor Lift
<u>500398</u>	Ram/Pump Seal Kit To Suit 592580 Scissor Lift
<u>500399</u>	Cable & Lever Assembly To Suit 592580 Scissor Lift
<u>500397</u>	Wheel Complete With Bearing Suit 592580 Scissor Lift

No.	Drawing No.	Description	Qty.	Remark
2	SP115.1.01	Handle bar	1	
3	SP15.0.11	Pressing buckle	1	
4	SP15.0-13	Spring	1	
5	SP.1-02	Retaining ring	4	
6	GB882-86	Pin8×45-A	4	
7	GB5781-2000	Bolt M8×20	8	
8	GB96-85	Washer 8	8	
9	GB95-85	Washer 8	9	
10	GB93-87	Washer 8	9	
11	GB41-86	Nut M8	9	
12		Universal Wheel 4"	2	SP15.4-00
13	SP15.7-00	Frame	1	
14	GB5780-2000	Bolt M8x60	2	
15	SP15.0-03	Wheel 4"	2	
16	GB889-86	Nut M8	2	
18	SP.0-11	Shaft	1	
19	SP.0-12	Bush	1	
20	GB894.1-86	Retaining ring for axle 10	1	
21	SP15.0-09	Shaft	1	
22	YQ-7-150	Retaining ring	1	
23	GB894.1-86	Retaining ring for axle 16	4	
24	SP15.3.01B	Connecting rod	1	
25	SP.3-03	Cushion	1	
26	GB5781-2000	Bolt M8x30	1	
27	SP15.3.02/.03	Pedal bar	1	Rubber cover
28	SP15.5-00	Table	1	
29	SP15.6-12	Roller	4	
30	GB894.1-86	Retaining ring for axle 12	9	
31	SP15.6-00	Arm	1	
32	SP15.6-07	Support	2	
33	SF-1.1210	Bush	4	
34	SP15.0-01	Pin	4	
35	SP15.0-02	Pin	1	
36	GB848-86	Washer 16	2	
41	YQ-00-150	Pump unit	1	
43	YQ-8-150	Retaining ring	1	
44	SP15.6-09	Roller	2	
45	SP15.0-12	Spring	1	
46	SP15.0-05	Cover	4	
47	SP15.0-06	Hollow shaft	2	
48	SP15.0-07	Needle roller and frame	2	

592580

PARTS BREAKDOWN

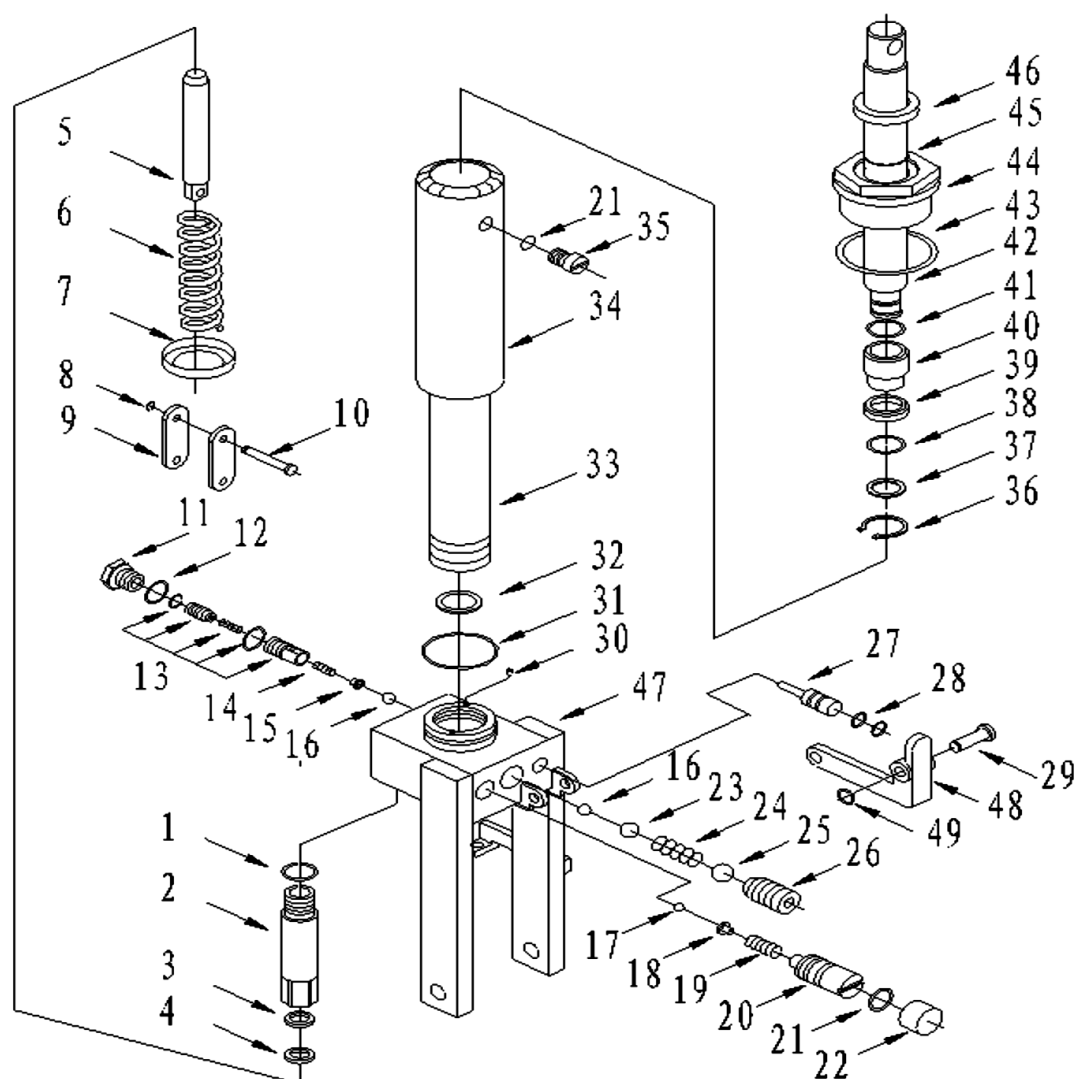

No.	Drawing no.	Description	Qty	No.	Drawing no.	Description	Qty.
1	GB3452.1-86	O-ring 22.4×2.65	1	26	GB77-85	Screw M16×18	1
2	SP.8-11	Pump cylinder	1	27	YQ-01	Strike pin	1
3	UHS18	YX-seal ring	1	28	GB3452.1-82	O-ring 6.9×1.8	2
4	DH18	Dust ring	1	29	DF1.2-08	Shaft	1
5	SP.8-10	Pump plunger	1	30		Filter	1
6	SP.8-09	Spring	1	31	GB3452.1-82	O-ring 65×3.5	1
7	SP.8-08	Spring seat	1	32	SP15.8-05	Rectangular se	1
8	GB894.1-86	Retaining ring	1	33	SP15.8-02	Cylinder	1
9	SP15.0-10	Joint plate	2	34	SP15.8-01	Housing	1
10	SP.0-14	Pin	1	35	SP.8-02	Screw	1
11	JF.1-17	Plug	1	36	GB894.1-86	Retaining ring	1
12	JB982-77	Copper washer	1	37	SP15.8-06	Washer	1
13	6W804.1-12	Damp valve	1	38	GB3452.1-82	O-ring 27×4	1
14	YQ-03	Spring	1	39	C01.02-20	Cup packing	1
15	YQ-02	Spring seat	1	40	SP15.8-04	Bush	1
16	GB308-77	Steel ball	2	41	GB3452.1-82	O-ring 15×2.6	1
17	GB308-77	Steel ball	1	42	SP15.8-03	Piston rod	1
18	SP.8-18	Spring seat	1	43	C01.2-16	Rectangular se	1
19	SP.8-17	Spring	1	44	C01.2-15	Cylinder cap	
20	SP.8-16	Adjusting screw	1	45	GB3452.1-82	O-ring 31.5×3	1
21	GB3452.1-86	O-ring 7.5×2.65	2	46	HG4-692-67	J-shaped steel	1
22	SP.8-15	Cover ring	1	47	YQ.6-150	Base	1
23	GB308-77	Steel ball 9.5	1	48	YQ-04	Lever plate	1
24	SP.8-07	Spring	1	49	GB894.1-86	Retaining ring	1
25	GB308-77	Steel ball 1/2(12.7)	1				